



**EMS-VVX[®] 15-35
DRIVE SYSTEM**

INSTRUCTION MANUAL GB

Valid for the following models:

EMS-VVX 15S

EMS-VVX 15E

EMS-VVX 25S

EMS-VVX 25E

EMS-VVX 35S

EMS-VVX 35E

Software version R1

The product is protected as follows:

Patents: US 4 868 478; EP 0 285 637; SE 8604308-0;

US 5 315 224; EP 0 507 835; SE 9002217-9;

SE 9902821-9

Registered design: DE 400 05 393.4.

Registered designs pending:

SE 992 196; US 29/124 164

Document number: 01-2157-01

Edition: r2a

Date of publication: 18 November 2002

© Copyright Emotron AB 2002

Emotron AB reserves the right to change without warning specifications in the text and in illustrations. The contents of this document may not be copied without the permission of Emotron AB.

SAFETY REGULATIONS

During installation

- Read the instruction manual completely before installation and commissioning.
- The installation must be carried out by qualified personnel.
- General conditions and regulations for the installation and operation of electrical machinery must be observed.
- Measures to protect against personal injury and damage to the machine must be taken following local rules and regulations.
- The drive system EMS-VVX is intended for permanent installation.
- Cables may not be connected or disconnected while the supply voltage is on.
- Check that the equipment is correctly connected before it is taken into use, see the instructions in the chapter on Mounting/Connection.
- Faults that arise due to faulty installation or operation are not covered by the guarantee.

During operation

- Measurement in the control unit during operation may only take place at the connection terminal blocks. NOTE! Great care must be taken.
- The units may not be opened or disassembled during operation.

During disassembly and scrapping

- The housing of the control unit is made from aluminium and steel. The material must be handled and recycled following the relevant laws.
- The circuit board contains small amounts of tin and lead, which must be handled and recycled in accordance with the relevant laws.
- The motor is made from copper, plastic, aluminium and iron. These materials must be handled and recycled in accordance with the relevant laws.

CONTENTS

1.	DESCRIPTION.....	5
1.1	Introduction	5
1.2	Product range	5
1.3	Operating indicators / built-in functions.....	6
2.	MOUNTING/CONNECTION.....	10
2.1	Mounting	10
2.2	Connection.....	11
3.	MAINTENANCE/TROUBLESHOOTING.....	19
4.	TECHNICAL DATA.....	22
4.1	Choice of size of drive system and belt pulley	26
4.2	Accessories and documentation	27

1. DESCRIPTION

1.1 Introduction

EMS-VVX® 15-35 is a series of speed controlled drive systems specially designed for driving rotary heat exchangers. The drive systems consist of a motor and its associated control unit.

EMS-VVX 15-35 completely replaces drive systems EMS-VVX 1, 2-4N, 2-4N/ET and 2-4EM.

The new EMS-VVX drive systems are based, like their predecessors, on switched reluctance (SR) motors. These motors make it possible to drive heat exchanger rotors up to 3.5 metres in diameter without gears.

1.2 Product range

EMS-VVX is available in three sizes for rotors up to around 3.5 m. They come in sizes 15, 25 and 35.

The control unit is available in two versions, S and E, where Model E has an extra circuit board for increased functionality. Built-in functions included in the Model S are:

- Automatic purging operation.
- Rotation monitor with external rotation sensor.
- Alarm relay.
- Test switch.
- Priority switch/defrosting.
- Heat recovery on cooling with external differential thermostat.

In addition to the functions included in Model S, the Model E includes:

- Speed of rotation display – the speed of the rotor in rpm.
- Analogue output signal 0–10 V/0–20 mA proportional to the speed of rotation of the motor.
- Heat recovery on cooling with external temperature sensors.
- Input for potentiometer with low resistance, 100 Ohm to 5 kOhm.
- Prepared for serial communication.

1.3 Operating indicators / built-in functions

Two LEDs, one red and one green, are used on the Model S for indication, while the Model E has an LED display as follows:

Table 1 Operating indication – Model S.

Green	Slow flashing – Purging mode/Low control signal.
	Rapid flashing – Operation, the motor rotates continuously.
	Lit for two seconds – Magnet passing rotation sensor.
Red	Lit or flashing LED indicates alarm. Indicates over-voltage or under-voltage, rotation alarm, overload or internal fault, see also the chapter on troubleshooting.

Table 2 Operating indication – Model E

25	The speed of the rotor in rpm. At start a speed is displayed according to the gear ratio rotor/motor = 1:25. After 2 pulses from the rotation monitor, the correct speed of rotation of the rotor is displayed. Range 0.2–99 rpm.
0.1	Purging mode. Low control signal.
.	Lit for two seconds when the magnet passes the rotation sensor.
5	Summer operation/heat recovery on cooling, shown when the temperature of the output air is lower than the ambient temperature, (the voltage between terminals 51 and 53 is higher than that between terminals 51 and 52.).
on	DIP switch (4) is set for operation without a separate rotation sensor (rotation monitor).
FB	An alarm is indicated by the letter F followed by a number. Over-voltage and under-voltage, rotation alarm, overload and internal fault are indicated by different numbers. See also the chapter on troubleshooting.

Automatic purging mode / holding torque

When the control signal is low, $<1.5\text{ V}$ at $0\text{--}10\text{ V}$, the drive system switches to purging mode. In purging mode the motor shaft turns two revolutions every 10 minutes, which is equivalent to around 30 degrees of rotation by the heat exchanger rotor. This slow rotation does not provide any significant heat transfer, but simply serves to keep the rotor clean.

Most of the time the rotor seals keep the rotor stationary, but if the rotor seals are not touching the rotor and the air flow is not perpendicular to the rotor, the air flow may make the rotor rotate. To prevent unintentional heat recovery in this situation the motor is used to provide a holding torque to keep the rotor stationary.

The first time the drive system goes into purging mode after the power is switched on this holding torque is not activated, since many rotors do not require an active holding torque to keep them stationary. A rotor that does require a holding torque will then begin to turn slowly. The drive system immediately brakes this motion, reducing the speed to zero, and then applies a constant holding torque to keep the rotor stationary. The drive system has now learned which rotors require a holding torque, and which do not. The holding torque is 10% higher than the torque that was required for operation just before it is brought to rest. This means that the torque may vary during one rotor revolution.

If a holding torque has been applied and you grasp the drive belt and try to turn the rotor by hand, the torque will progressively increase.

The holding torque is generated by passing a current through one of the motor phases. The higher the torque that is required, the higher the current. This current produces a noise that gets louder as the current increases. Built-in overload protection in the control unit, consisting of three i²t cut-outs, one for each motor phase, also protects the motor when the holding torque is applied.

Rotation monitor (DIP switch 4)

The rotation monitor checks that the heat exchanger rotor is rotating. A magnet mounted on the periphery of the rotor passes a rotation sensor once per revolution.

If, for example, the belt fails and the rotor stops rotating, the pulses cease and an alarm is given. However, the motor does not stop, it keeps rotating even if an alarm is given that the rotor rotation has stopped. If it is desired that the motor should stop on all types of alarm, including that given by the rotation monitor, the supply power can be externally interlocked when an alarm is given by the EMS-VVX control unit. The time period before the alarm is given is 20 minutes at minimum rotation speed and 24 seconds at maximum rotation speed. The rotation monitor is also active when the system is in purging mode. In this case, the time period before the alarm is given is approximately 8 hours. The magnet and rotation sensor must be ordered separately.

Test switch

The control unit is equipped with a test switch, placed under the cover between terminals 37 and 41. When this switch is in the “ON” position, the motor soft-starts and the speed increases to the maximum, independently of other signal sources. When in the “OFF” position (down), the test switch is not operational.

The test switch can also be used to run the motor at maximum speed if, for example, an external control signal is available.

Protection of the control unit

The control unit is protected by monitoring for both over-voltage and under-voltage. If the supply voltage goes over or under the allowed limits, the control unit is disconnected and the motor stops. The motor starts again automatically when the supply voltage returns to its normal value.

The control unit has built-in motor protection that protects against overloading, and external motor protection is not required. Power supply to the motor is cut in the event of overload. In order to restart the drive system, the supply voltage to the control unit should be temporarily disconnected for at least 5 seconds.

Built-in short circuit protection protects against short circuits between the phases of the motor and between the phases and earth.

Table 3 Protection and alarm functions

Protective function	External alarm with alarm relay	Restart	Alarm reset
Supply fault, over-voltage	Immediately	Automatic	Automatic
Supply fault, under-voltage			
Pre-alarm, rotation monitor	No	Motor not stopped	
Rotation monitor	Within 24 sec. (max. speed) to 8 h (purging)		
Pre-alarm, motor protection/overload	No	The system tries to reset three times	
Motor protection/overload	Immediately	Manual, disconnect and reconnect power supply	
Short circuit			

2. MOUNTING/CONNECTION

2.1 Mounting

Both the motor and the control unit are usually mounted in the heat exchanger housing. In this way, they do not occupy any space outside of the heat exchanger housing and are well protected during transport. Furthermore, it is often advantageous from the point of view of interference (EMC) to place the motor and control unit in the rotor housing. The motor is usually mounted on a sprung motor support when a V-belt is used. In this way, problems arising if non-circular rotors are used can be prevented. Vibration dampers should be mounted between the motor and the motor support so that any vibration from the motor is not transmitted to the rotor housing.

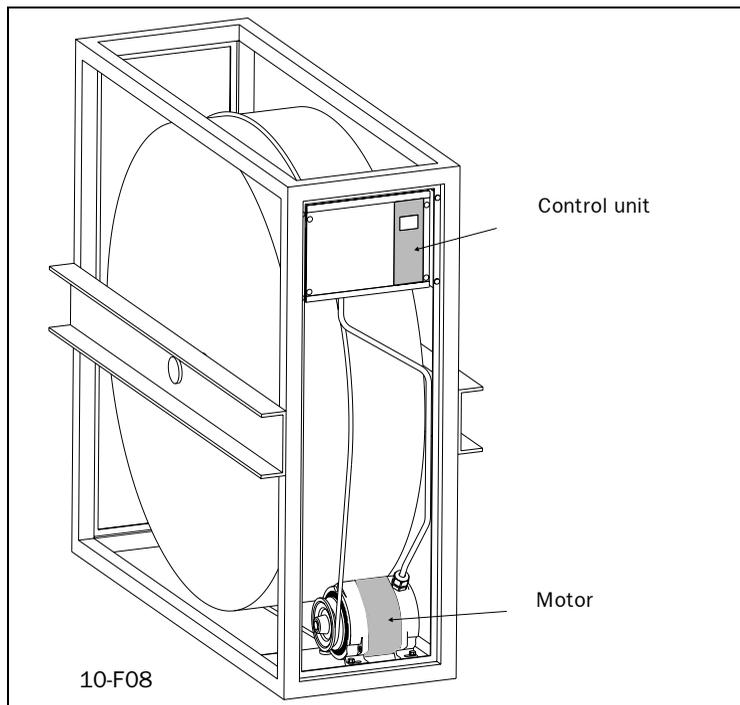


Fig. 1 Rotor and drive system.

Sensor for rotation monitor

The magnet for the rotation sensor is screwed onto the periphery of the heat exchanger. If the rotor cover is magnetic, the magnet must be insulated from the cover. The rotation sensor is mounted such that the magnet passes at a distance of 5–8 mm, see below.

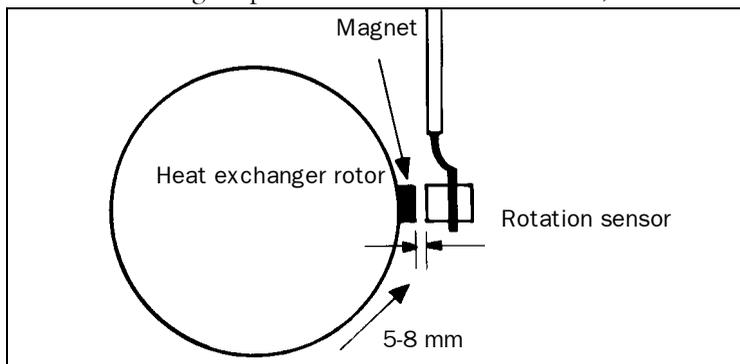


Fig. 2 Mounting of the rotation sensor.

2.2 Connection



WARNING! Residual voltage remains for up to 1 minute after disconnection of the supply voltage.

The motor is delivered with a fixed connected motor cable to simplify installation of the drive system. The length of the cable is 2.0 m for EMS-VVX 15M and 2.5 m for EMS-VVX 25M and EMS-VVX 35M. The motor cable cannot be extended because this could interfere with the electronic tachometer that is built into the system.

An external slow-blow fuse rated at 10 A must always be installed. The drive system does not contain a fuse. Electronic motor protection is built into the control unit, and monitors the motor at all times. The control unit is protected from short circuit within the motor.

A safety switch is to be installed between the mains supply and the control unit. An alarm for loss of power is given if the mains supply is disconnected.



WARNING! No switch is allowed between the motor and the control unit.

When switching off

When it is desired to switch off the heat exchanger, for example at night, this can be done using a relay connected in series with the control signal. This relay interrupts the signal to control signal terminal number 33. In this way, no alarm about interruption of power supply is given. The control signal can of course also be reduced to its minimum value, in order to achieve the same result. If the control signal is low or absent the drive system switches to purging mode.

Recommendations with respect to EMC

In order to fulfil the European EMC Directive 89/336/ECC regarding electromagnetic compatibility, the following precautions must be taken:

- The motor cable must be mounted as close to the heat exchanger housing as possible. If the cable is too long, the excess should be collected together in the form of, for example, a figure “8”. The area enclosed by the cable should be as small as possible. Electrical tape or cable ties can be used to achieve this.

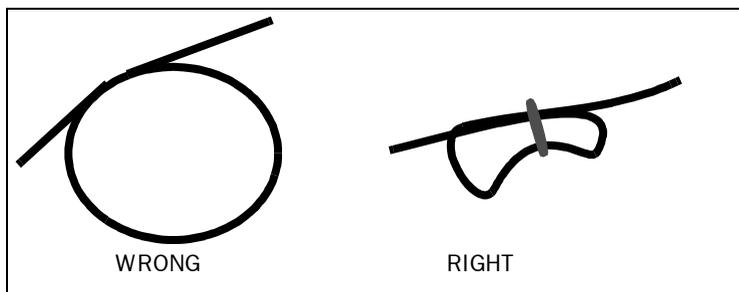


Fig. 3 Excess motor cable should be arranged such that the area enclosed is as small as possible.

Special EMC couplings/glans are not necessary.
An EMC filter is built into all EMS-VVX models.


Priority switch / defrosting / manual control

A preselected speed of rotation can be specified by a potential-free connection between the priority inputs 34–35. When terminal 34 is connected to terminal 35, the speed of rotation is determined by the priority potentiometer, which is located next to the DIP switches in the control unit. The priority switch has higher priority than the summer/winter switch (only available on Model E) and the control signal.

The switch can be used, for example, when cleaning the rotor, defrosting using an external differential pressostat or for manual control of the speed of rotation.

Manual control using a 10 kOhm potentiometer

It is simple to control the drive system manually using a 10 kOhm potentiometer connected as shown in the figure.

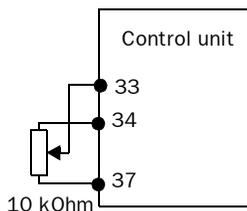

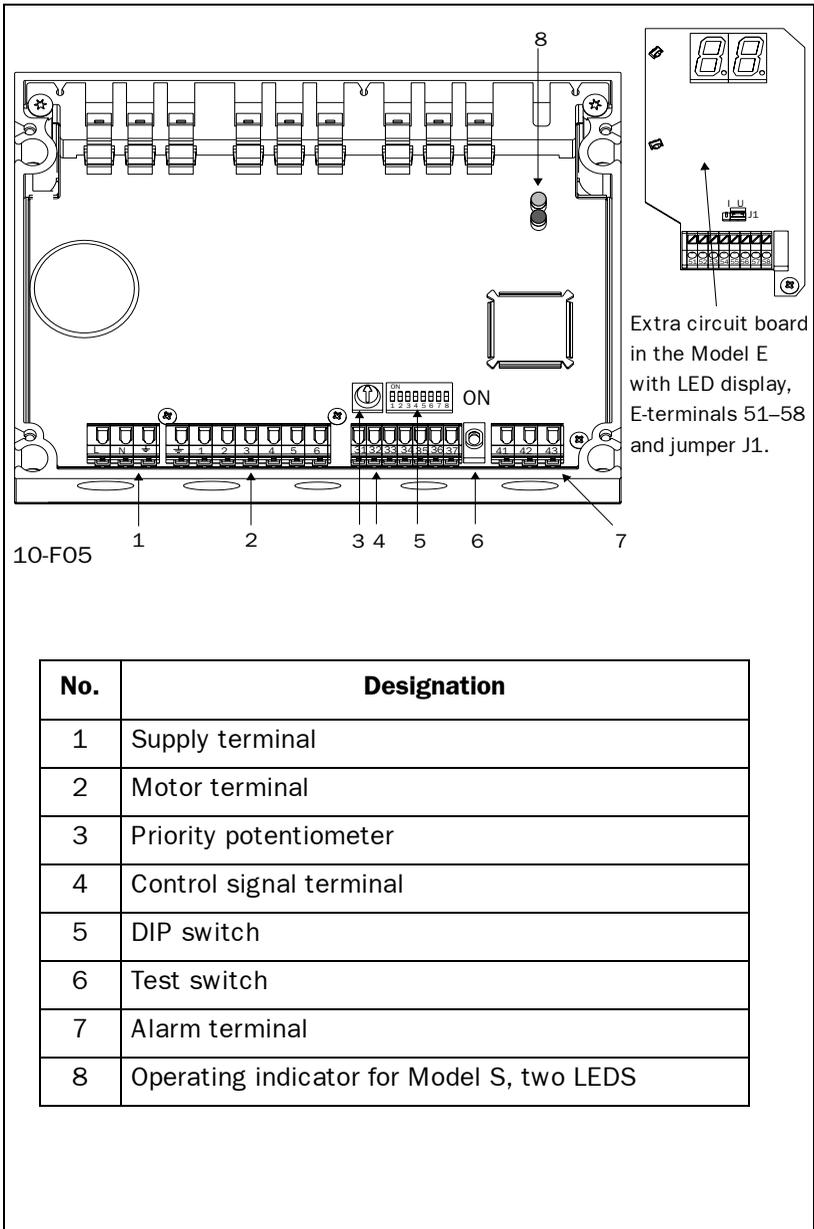


Fig. 4 Location of terminals, etc

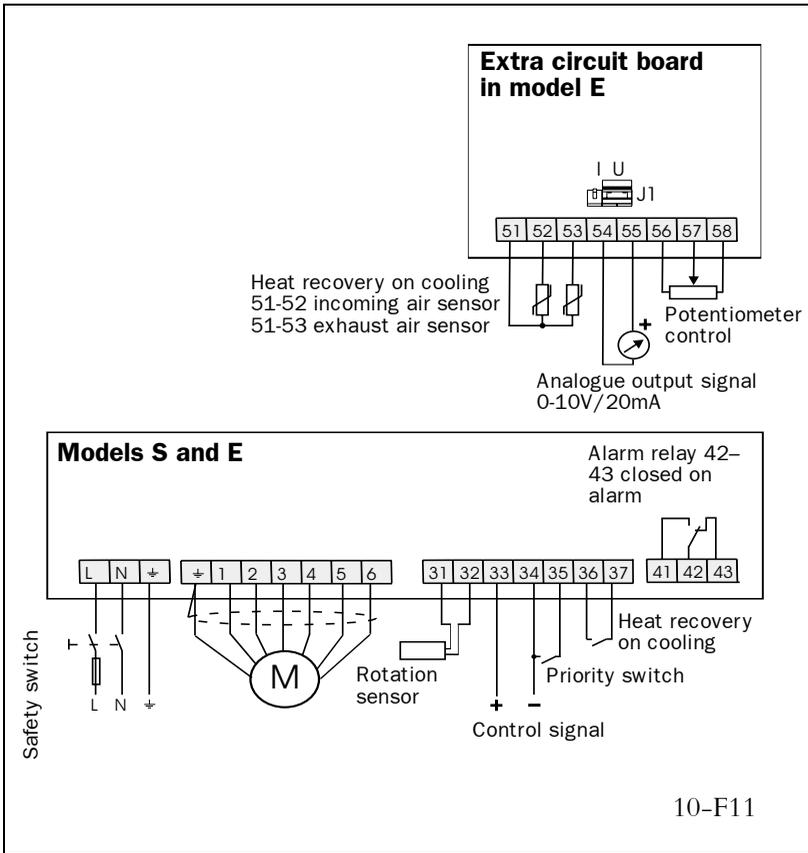
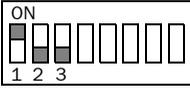
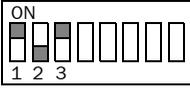
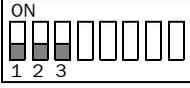
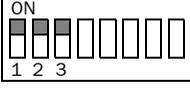
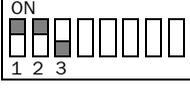
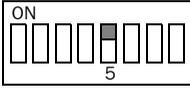
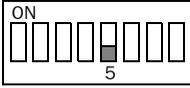
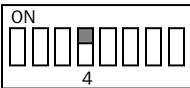
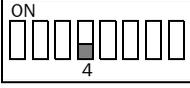
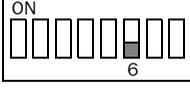
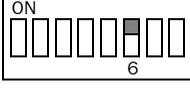
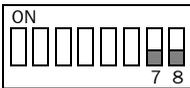
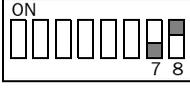
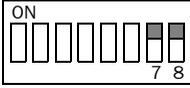


Fig. 5 Wiring diagram

Choice of maximum speed

The maximum speed can be limited to 80% (200 rpm) or 60% (150 rpm). This function is primarily intended for use with rotors smaller than 1.3 m, when it is desired to limit the speed of rotation and/or when using larger belt pulleys.

Setting DIP switches

<p>Control signal</p> <p>0-10 V 10 kOhm</p>  <p>1 2 3</p> <p>2-10V</p>  <p>1 2 3</p> <p>0-20V</p>  <p>1 2 3</p> <p>4-20mA</p>  <p>1 2 3</p> <p>0-20mA</p>  <p>1 2 3</p>	<p>Speed controller</p> <p>V-belt</p>  <p>5</p> <p>Other belts</p>  <p>5</p>
<p>Rotation monitor</p> <p>YES</p>  <p>4</p> <p>NO</p>  <p>4</p>	<p>Direction of rotation</p> <p>Clockwise</p>   <p>6</p> <p>Anti-clockwise</p>   <p>6</p> <p>Maximum speed</p> <p>100%</p>  <p>7 8</p> <p>80%</p>  <p>7 8</p> <p>60%</p>  <p>7 8</p>




WARNING! Disconnect the voltage supply before changing the DIP switch settings.

Speed controller

DIP switch 5 on the control unit can be used to select between two speed controllers. One controller provides gentler operation and is used if resilient belts such as round belts, flat belts and resilient V-belts are fitted. In this case DIP switch 5 should be set “OFF”. The other controller is faster and stiffer, and is intended for use with stiff belts. In this case DIP switch 5 should be set “ON”.

If the stiffer controller is not adequate for smooth operation when the max. speed is set to 100%, an even stiffer and faster controller can be selected by setting DIP switches 5 and 7 “ON” and setting DIP switch 8 “OFF”.

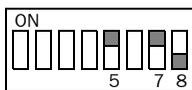


Parallel connection

If several rotary heat exchangers are to be used in parallel using one control signal or sensor, each heat exchanger rotor must be equipped with its own drive system (motor and control unit).

The control signal is connected to the first drive system according to the instructions for connection. The other control units are connected by connecting terminals 33 and 34 of the other control units to terminals 33 and 34, respectively, on the first control unit.

The DIP switches on the first control unit are set as described in “Setting DIP switches”. DIP switch 1 and DIP switch 3 on the other control units are set as described in “Setting DIP switches”, while DIP switch 2 is always set as described below:

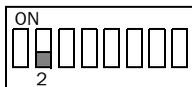

The control units give individual alarms. The alarm outputs can be connected in parallel or in series in order to obtain a collective alarm.

Model E can also use the analogue output signal in order to control other drive systems. Terminals 54(-) and 55(+) are connected to terminals 34(-) and 33(+), respectively. The DIP switches on all control units are set as described in “Setting DIP switches”.

Heat recovery on cooling – summer/winter switch

Heat recovery on cooling refers to the mode of operation when the incoming air temperature exceeds the exhaust air temperature. By driving the rotary heat exchanger at maximum speed, a cooling effect is achieved on the incoming air. The heat recovery on cooling function is most simply obtained by using an external regulator which has this function built-in. EMS-VVX is then controlled by a control signal, e.g. 0–10 V.

If for example, an external regulator is already installed, you can obtain the heat recovery on cooling function by directly connecting a separate differential thermostat to EMS-VVX, terminals 36–37

Model E has a built-in differential thermostat. This makes it possible to connect two NTC sensors of resistance 2000 Ohm (for example EGL 511), one in the incoming air duct and one in the exhaust air duct, directly to EMS-VVX, terminals 51–53. If the exhaust air is colder than the incoming air, the rotor rotates at its maximum speed, and cooling is recovered. If the exhaust air is warmer than the incoming air (as is normally the case) the speed is controlled by the control signal, and heat is recovered.

Analogue output signal (only available on Model E)

The output signal, 0–20 mA or 0–10 V, is proportional to the speed of the motor. Maximum value, 20 mA or 10 V, is always obtained at the selected max. speed (60, 80 or 100% of the motor's maximum rpm). The choice between the 0–20 mA output signal and the 0–10 V output signal is made with jumper J1 positioned behind the control terminals 51–58.

Potentiometer with low resistance, 100 Ohm to 5 kOhm (only available on Model E)

When control is provided by a potentiometer with a total resistance value between 100 Ohm and 5 kOhm, the three leads are connected to terminals 56–58. DIP switches 1–3 are set in the same way as for a control signal of 0–10 V.

3. MAINTENANCE/TROUBLESHOOTING



WARNING! Residual voltage remains for up to 1 minute after disconnection of the supply voltage. The test switch and the DIP switches may only be adjusted when the supply voltage has been disconnected.

Maintenance

The motor and the controller do not normally require any maintenance. However, it should be regularly checked that the cabling is not damaged and that all fixing screws are securely tightened.

Motor diagnosis

Disconnect the supply voltage. Disconnect the motor cables from the control unit. Measure the motor resistance between 1–2, 3–4 and 5–6. The values should be:

15M: 30–90 Ohm; 25M: 5–15 Ohm; 35M: 5–15 Ohm

The resistance should not differ by more than 5 Ohm between the phases for 15M, and by no more than 2 Ohm for 25M/35M.

Also check the insulation resistance between 1–3, 1–5, 3–5, 1–earth, 3–earth and 5–earth.

Troubleshooting

Check that the equipment has been correctly installed, i.e. that the cables are properly stripped, that there are no loose cables, etc., and check that the DIP switches are correctly set.

It is always possible to test run the drive system using the TEST switch located under the cover next to terminal 37, see Fig. 4. The switch has two fixed positions, when it is in the up position, the motor accelerates to its maximum speed independent of the control signal, and when it is in the down position the rotation speed is controlled by the control signal.

If the motor does not reach maximum speed or respond to the control signal, check DIP switches 1–3 and 7 and 8. If the heat exchanger rotates in the wrong direction, change the setting of DIP switch 6. Reset, vibration, noise and built-in protection are described in the chapters Description and Mounting/Connection.

If the control unit is to be exchanged, the complete covered box containing the circuit boards must be exchanged.

Table 4 Troubleshooting

Alarm indication			Fault condition/Action required
S	E	Fault	
Green LED flashes slowly	Q1	Purging/low control signal	Check the EMS-VVX by running the drive system with the test switch located next to terminal 37. The motor should accelerate to its maximum speed. If the motor does accelerate to the maximum speed when the test switch is activated, the fault is external. Can 0–10 V (2–10 V) be measured between 33(+) and 34 (-)? Have + and - been swapped?
Red and green LED flash rapidly	P3	Pre-alarm rotation monitor	The drive system has switched to a softer speed controller because the motor shaft is jerking sharply. Check that the drive belt is undamaged, and that it is correctly tensioned and not slipping on the pulley.
Red LED flashes rapidly	F3	Rotation monitor	The exchanger rotor does not rotate; check the drive belt. The rotor rotates; check that the rotation sensor is correctly mounted, see the chapter on Mounting/Connection. When the magnet passes the sensor, the green LED on Model S and the right point on Model E should light up for two seconds. If not, replace the rotation sensor.
Red LED is lit and green LED flashes rapidly	P5	Pre-alarm, overload/motor protection	The motor protection has been activated due to excessive load. After a cool-down period of 5 minutes the system restarts automatically. If the overload protection trips 3 times within 120 minutes the drive system will be shut down, see also overload (F5).

Table 4 Troubleshooting

Alarm indication			Fault condition/Action required
S	E	Fault	
Red LED is lit	F5	Overload/ motor protection	The motor protection has been activated due to excessive load. Check that the motor cables are connected correctly, see the chapter on Mounting/Connection. Check also that the rotor runs freely and that the diameters of the rotor and pulley are not too large. If the fault remains, carry out motor diagnosis. Replace the motor if it is faulty. If the fault does not lie with the motor, replace the control unit.
No LED lit	-	Supply voltage missing	Check that 230 VAC $\pm 15\%$ is connected to the supply terminal.
Red and green LEDs flash slowly and alternately	F1	Overvoltage	The supply voltage exceeds 264 VAC.
	F2	Under-voltage	The supply voltage lies below 196 VAC.
Red and green LEDs flash rapidly and alternately	F6	Earth fault in the motor	Disconnect the supply voltage, check the connection of the motor cable and check that the correct motor is connected. If the fault remains, carry out motor diagnosis. If the motor is faulty, replace it. If the fault does not lie with the motor, replace the control unit.
Red LED flashes slowly	F7	Short circuit in the motor	
	F8	Circuit break in the motor	
	F9		

4. TECHNICAL DATA

Table 5 Technical data

Function		EMS-VVX		
		15	25	35
Output data	Rotation speed [rpm]	5-250		
	Torque ¹⁾ [Nm]	1.5	4	6
	Power [W]	40	100	160
	Direction of rotation	Selectable		
	Purging mode	Built-in function		
	Motor protection	Built-in function		
	Soft start and stop [s]	15/15	25/25	35/35
	Alarm output	Alternating contact, max 5 A 230 VAC		
Input data	Supply voltage	230 VAC ±15%, 50/60 Hz		
	Current [A]	0.7	1.3	1.7
	Control signal	0–10 V, 2–10 V, 0–20V phase cut, 0–20 mA, 4–20 mA, 10 kOhm potentiometer		
General	Protection class	IP 54		
	Weight, control unit [kg]	1.7		
	Weight, motor [kg]	5	8	11
	Terminals	3 of Pg11 and 2 of Pg9		
	Ambient temperature	-30 - +40° C		
	Tachometer	INTRASENS [®] (Electronic tachometer, tachometer cable is not needed)		
	EMC, Emission	EN 50081-1		
	EMC, Immunity	EN 50082-2		
¹⁾ Torque is constant over entire speed range.				

The drive system's operation using different control signals

The drive system has a built-in linearity function that gives a linear relationship between the control signal and the efficiency of the heat exchanger rotor, rather than having the speed of rotation proportional to the control signal. This provides good conditions for stable temperature control.

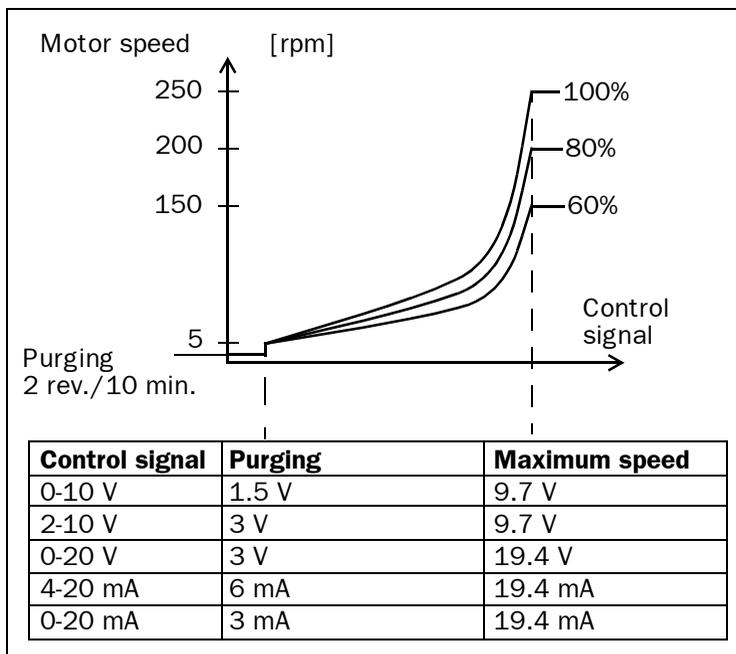


Table 6 Motor model designations

Article number	Designation	Notes
01-2160-00	EMS-VVX 15M	Cable 2.0 m
01-2162-00	EMS-VVX 25M	Cable 2.5 m
01-2163-00	EMS-VVX 35M	Cable 2.5 m

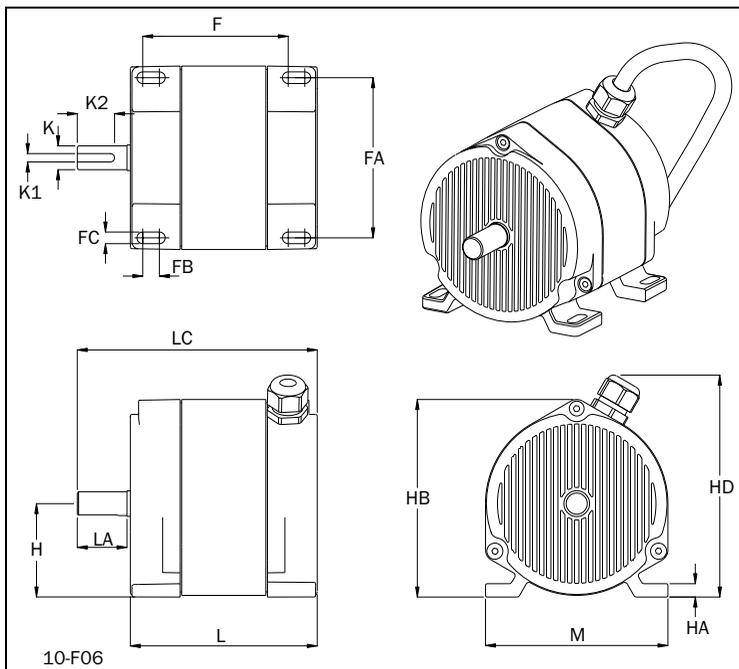


Fig. 6 Motor dimensions.

Table 7 Motor dimensions (mm)

EMS-VVX	F	FA	FB	FC	H	HA	HB	HD
15	88	96	10	7	56	8	119	134
25	82	140	12	7	81	10	173	180
35	109	140	12	7	81	10	173	180
EMS-VVX	K	K1	K2	L	LA	LC	M	
15	14j6	5h9	20	113	30	145	110	
25	14j6	5h9	20	114	35	152	160	
35	14j6	5h9	20	141	35	179	160	

Table 8 Control unit model designations

Article number	Designation
01-2170-01	EMS-VVX 15S
01-2171-01	EMS-VVX 15E
01-2174-01	EMS-VVX 25S
01-2175-01	EMS-VVX 25E
01-2176-01	EMS-VVX 35S
01-2177-01	EMS-VVX 35E

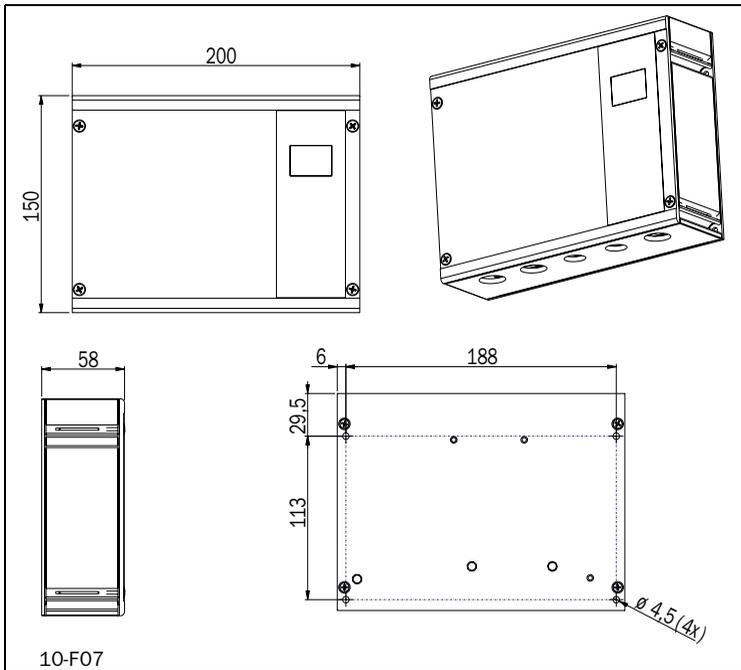


Fig. 7 Control unit dimensions (mm).

4.1 Choice for sizes of drive system and belt pulley

Table 9 Choice of size for drive system and belt pulley

Rotor diameter [mm]	EMS-VVX model	Belt pulley diameter [mm]	Maximum speed of revolution [%]	Rotor speed [rpm]
700	15	63	60	13.5
700	15	30	100	10.7
900	15	63	60	10.5
900	15	40	100	11.1
1100	15	63	80	11.5
1100	15	50	100	11.4
1300	15	71	80	10.9
1300	15	63	100	12.1
1500	15	71	100	11.8
1700	25	80	100	11.8
1900	25	80	100	10.5
2100	25	100	100	11.9
2300	25	100	100	10.9
2500	25	100	100	10.0
2700	35	118	100	10.9
3100	35	140	100	11.3
3500	35	140	100	10.0

NOTE! Higher rotor speeds than those given in the table above increase the loading and a larger drive system may be necessary. Tight rotor seals may also require the use of a larger size. Rotors that have a high capacity to absorb humidity, such as dehumidification rotors in desiccant cooling system requires a larger drive system, see separate documentation.

4.2 Accessories and documentation

Table 10 Accessories

Article number	Designation
01-2184-00	Rotation sensor with magnet
01-2179-00	Cable fixture for control unit 15-35
01-2182-00	Mounting kit, expander type for motor 15-35
01-2183-00	Mounting kit 2*M6 for motor 15-35

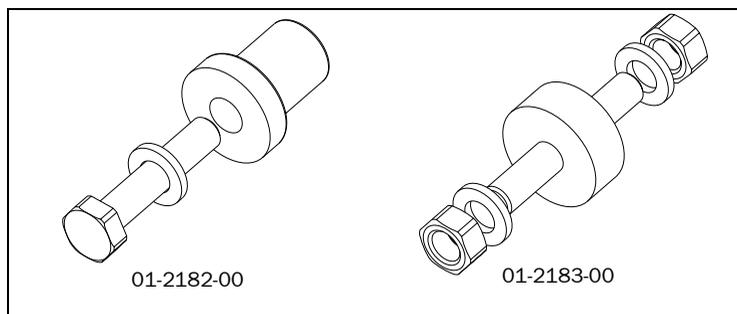


Fig. 8 Mounting kits with vibration damping for motor

Table 11 Operating instructions

Article number	Designation
01-2157-00	Swedish
01-2157-01	English
01-2157-02	German
01-2157-03	Dutch
01-2157-04	Finnish
01-2157-05	Danish
01-2157-06	Norwegian

e m o t r o n[®]

M A X I M I Z I N G U P T I M E

Emotron AB
Mörsaregatan 12
Box 22225
SE-250 24 Helsingborg
Sweden
Tel. +46 42 16 99 00
Fax. +46 42 16 99 49
www.emotron.com